



3

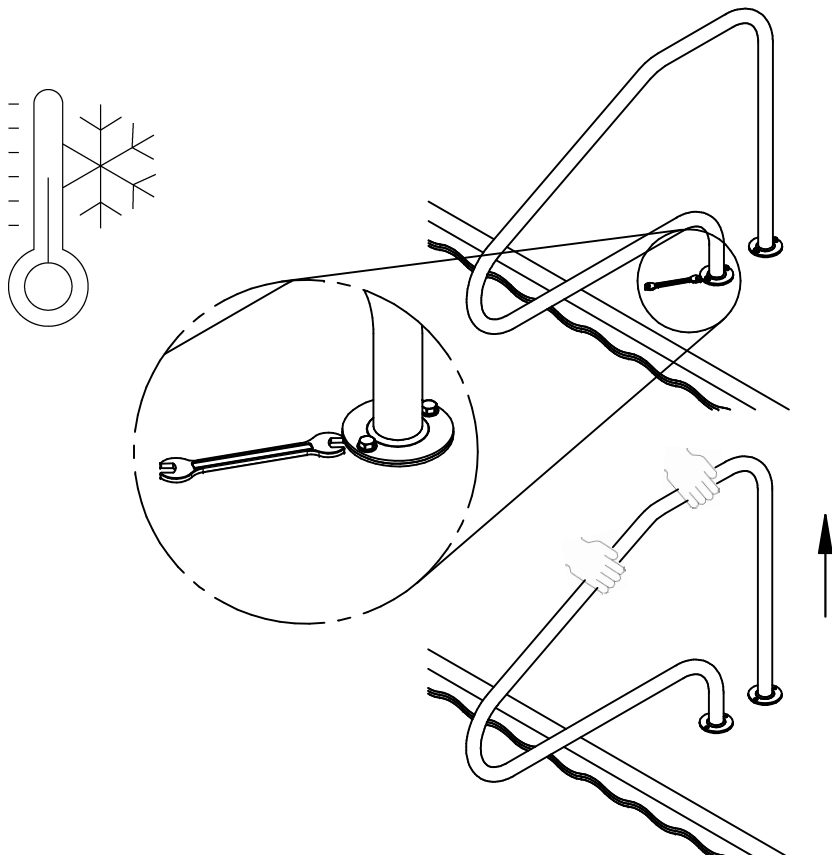

4

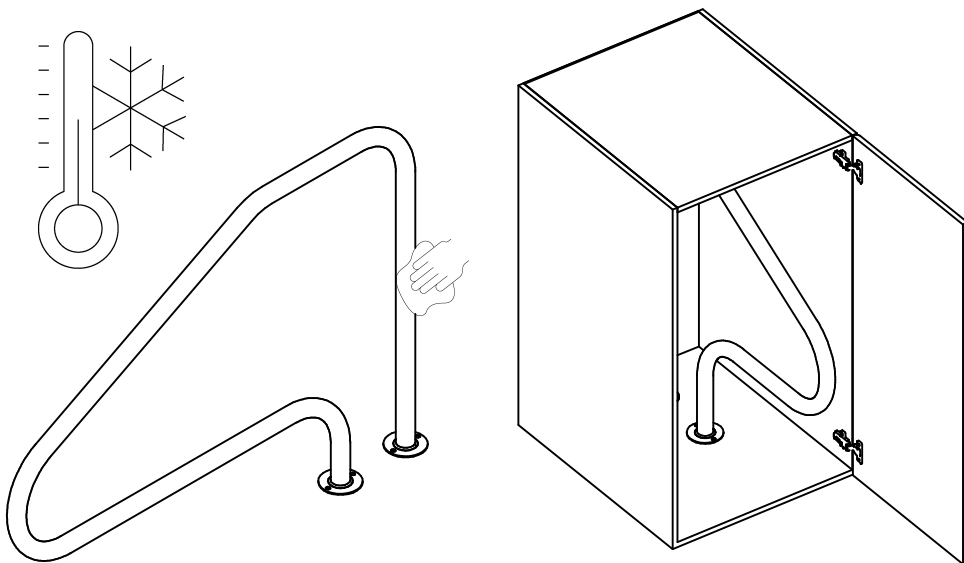

09940673









INSTRUCCIONES DE MONTAJE
BARANDILLA FX - 01 / PLETINA SOLDADA

ASSEMBLY INSTRUCTIONS
HANDRAILS FX - 01 / WELDED FLANGE


INSTRUCTIONS DE MONTAGE
SORTIES DE BAIN FX - 01 / PLETINE SOUDÉE

MONTAGEANLEITUNGEN
HALTEGRIFFE FX - 01 / GESCHWEIßTE FLANSCH



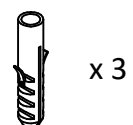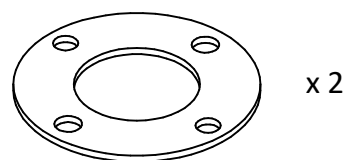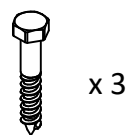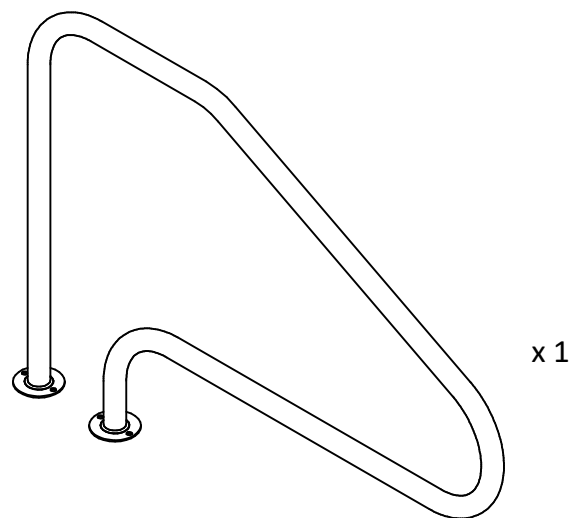

1

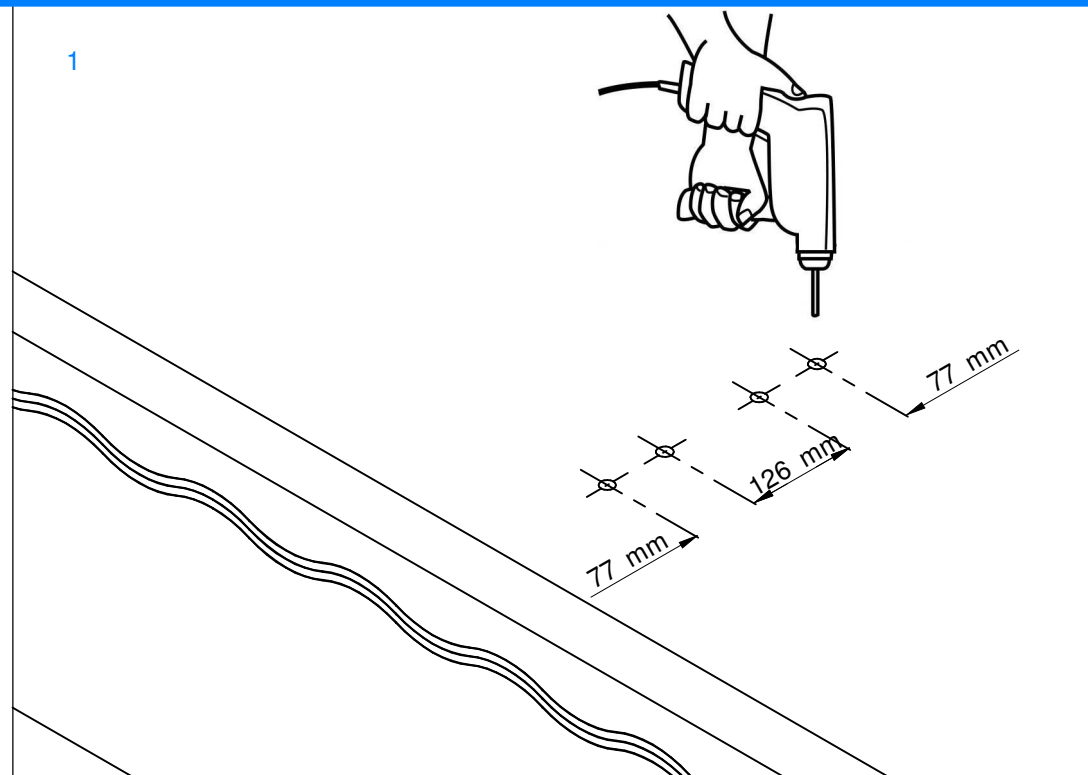

2

