



**INSTRUCCIONES DE MONTAJE**  
MIXTA









**ASSEMBLY INSTRUCTIONS**  
PARALLEL-LOCK



**INSTRUCTIONS DE MONTAGE**  
MIXTE

**MONTAGEANLEITUNGEN**  
KOMBI



09940805



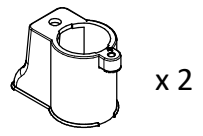

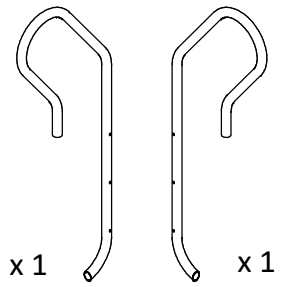


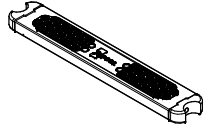	x 2	x 3	x 4	x 5
	x 4	x 6	x 8	x 10


15

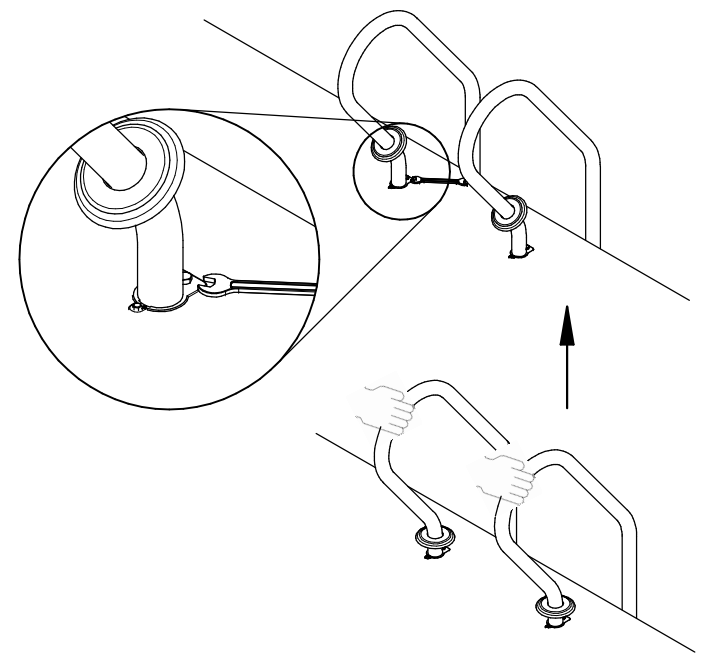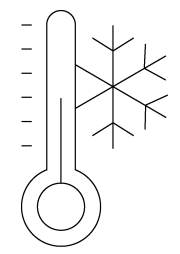


16

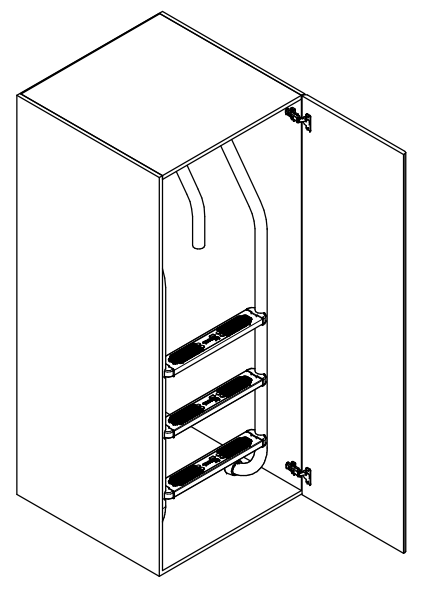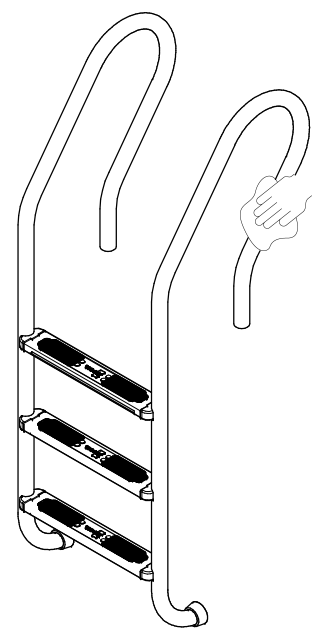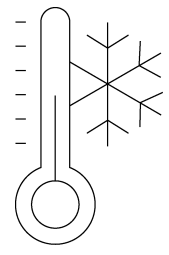


13

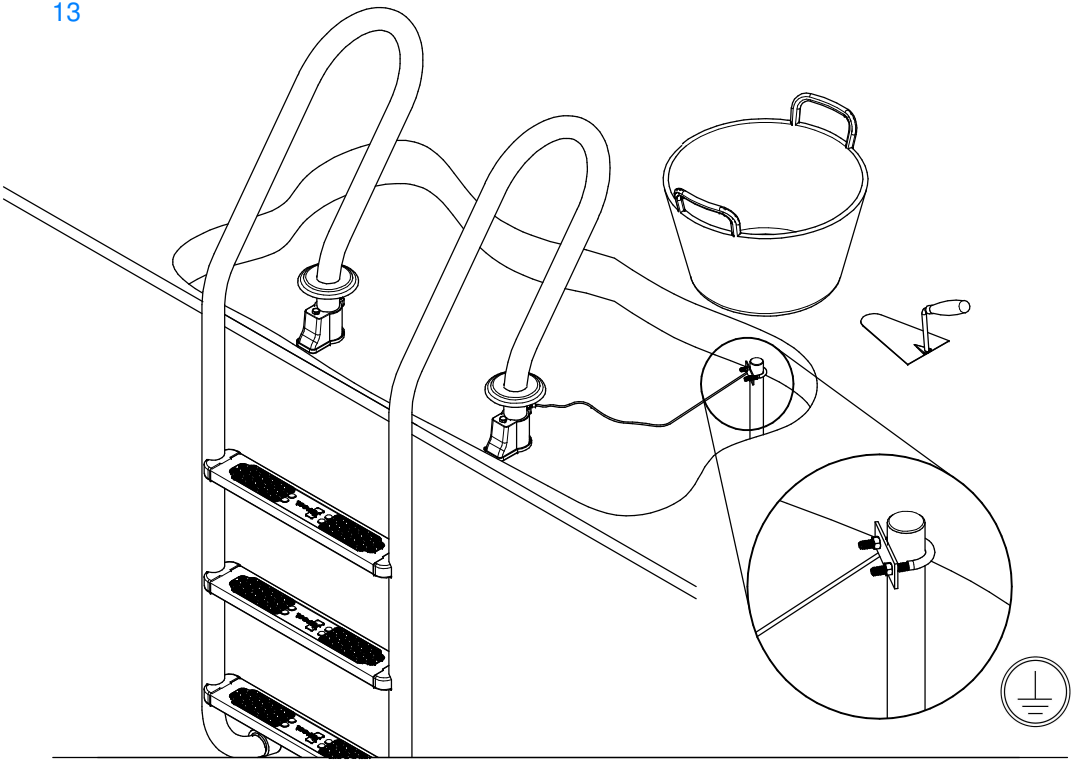


1

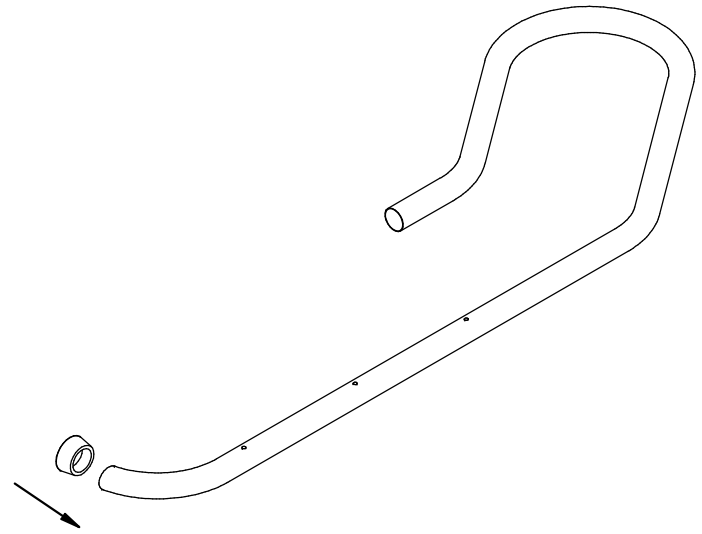


2

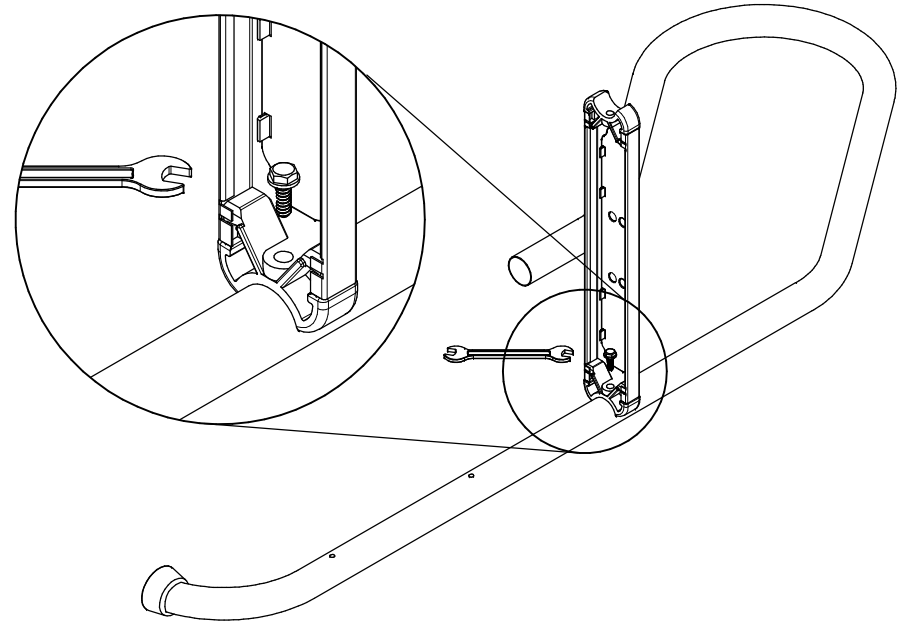


14

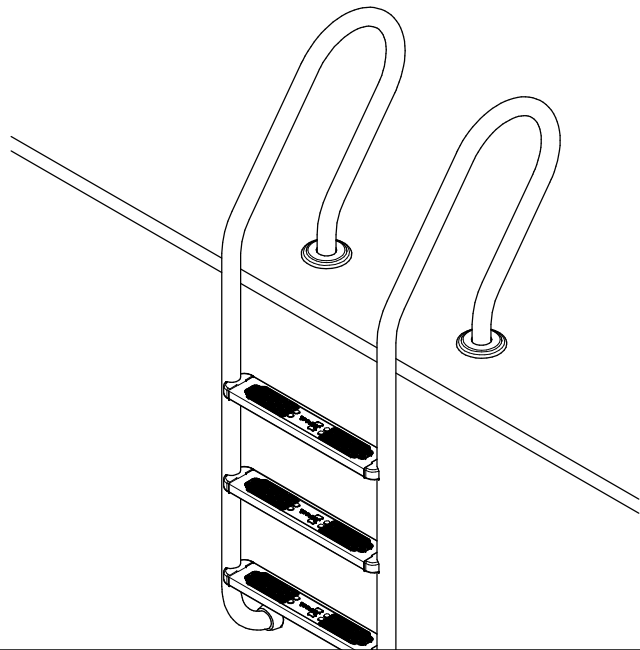


3

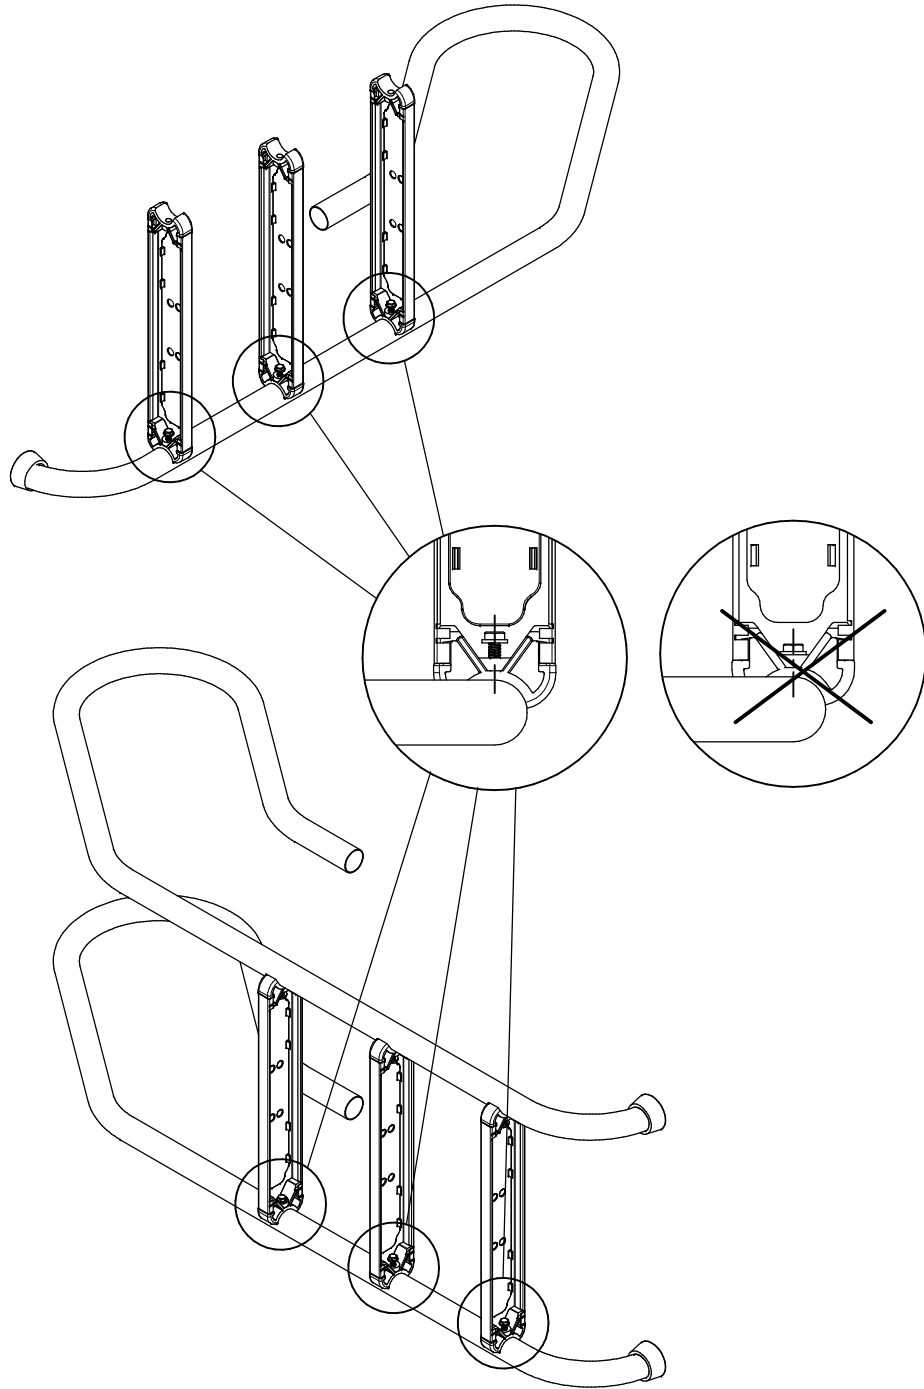


11

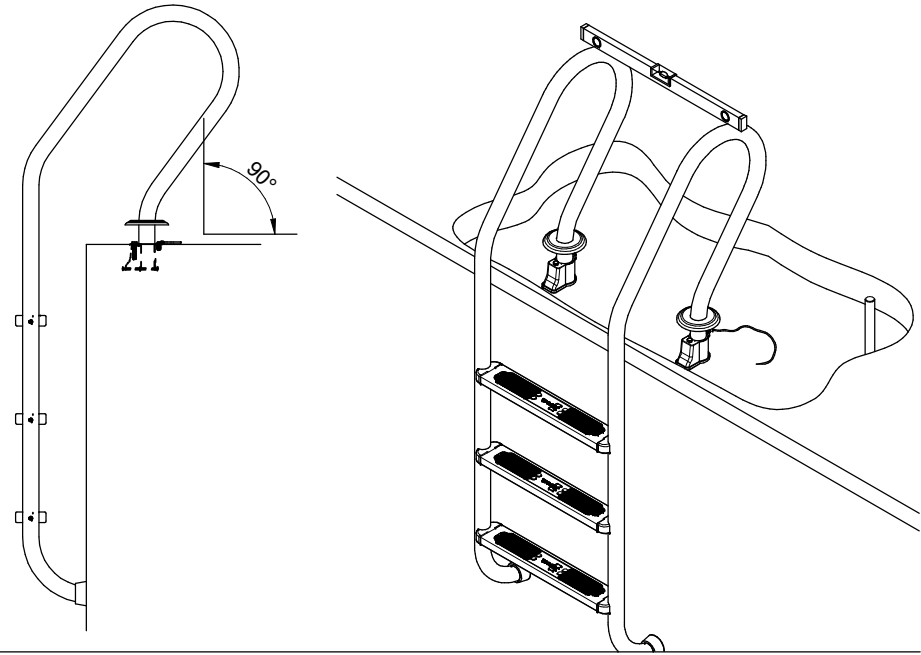


12

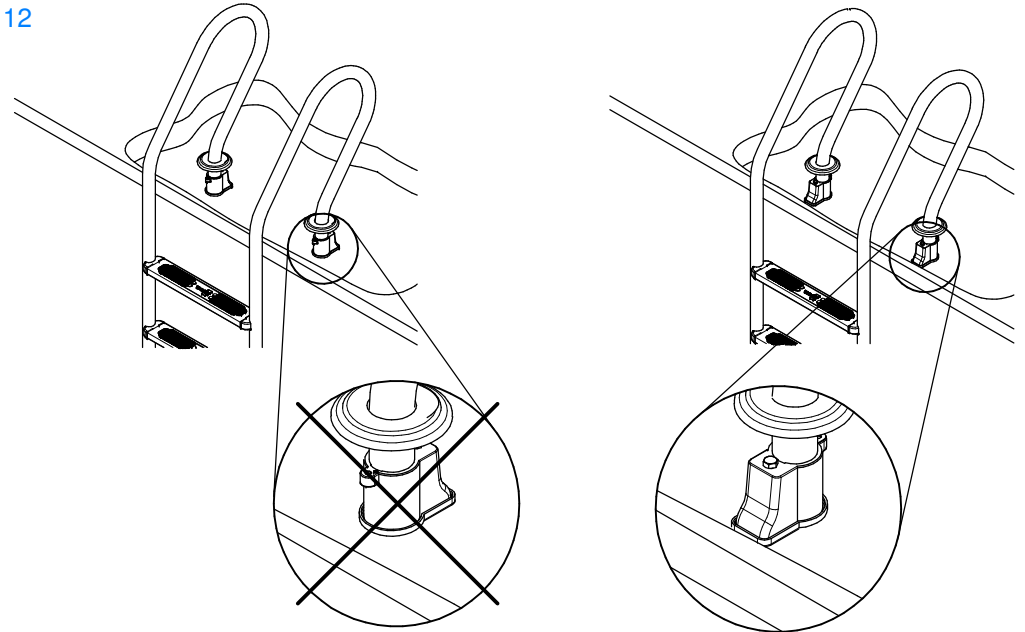



9

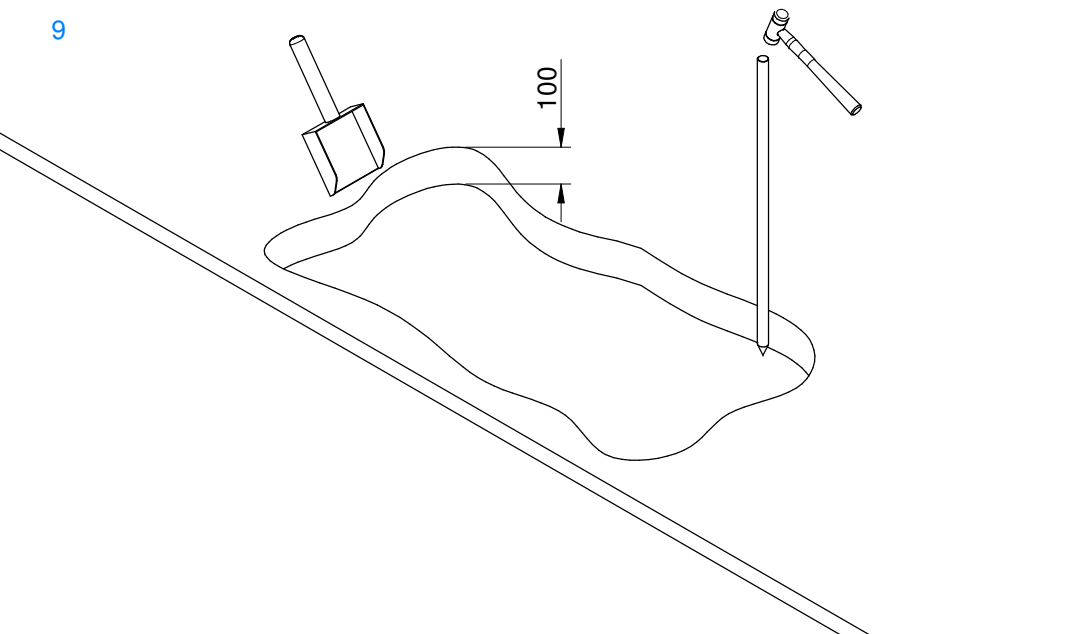


4

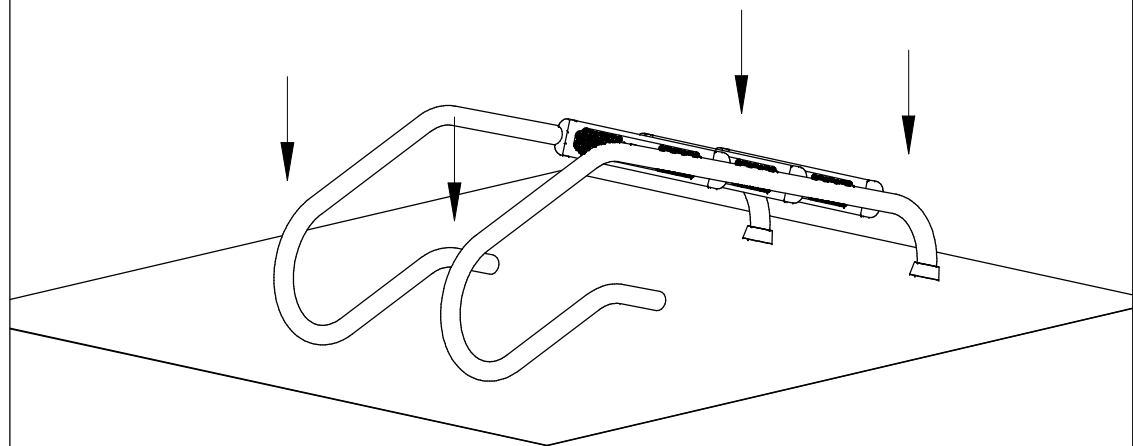


10

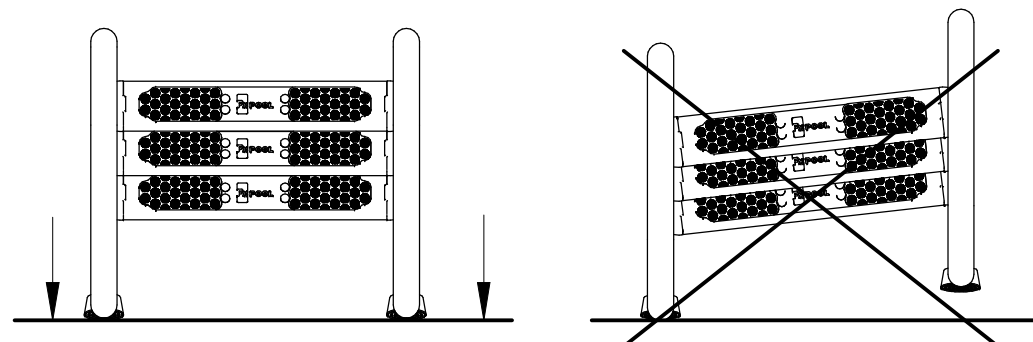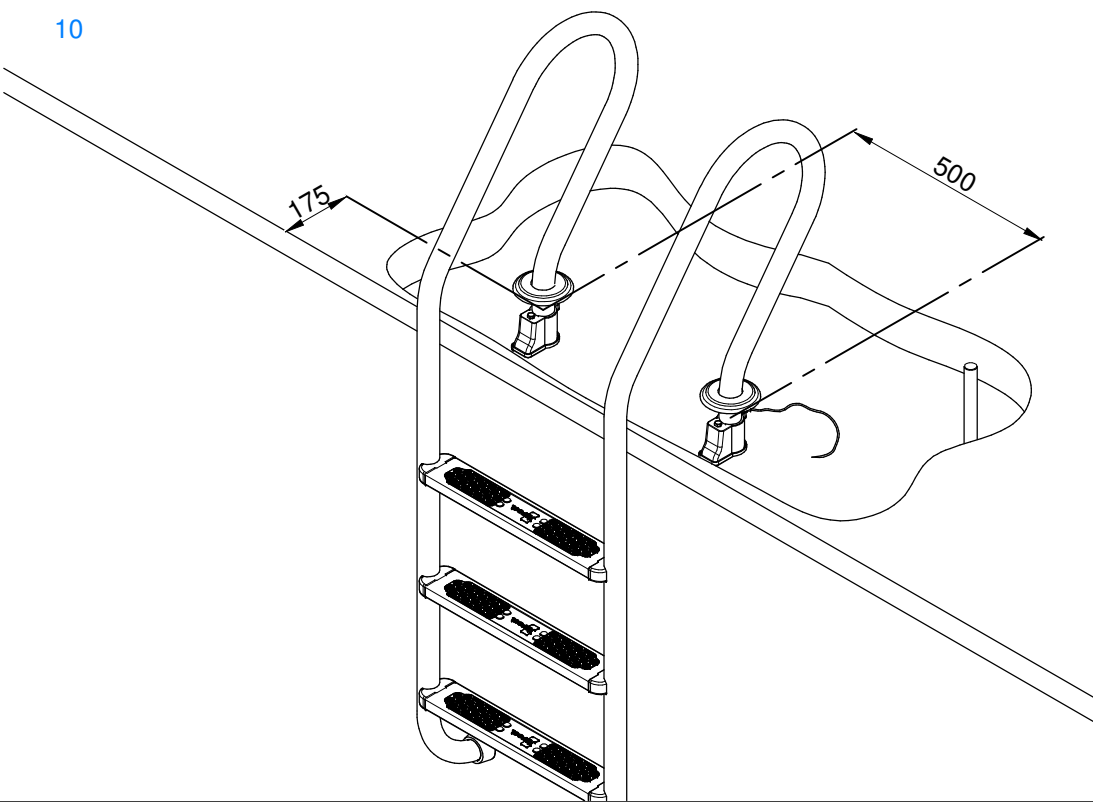


5

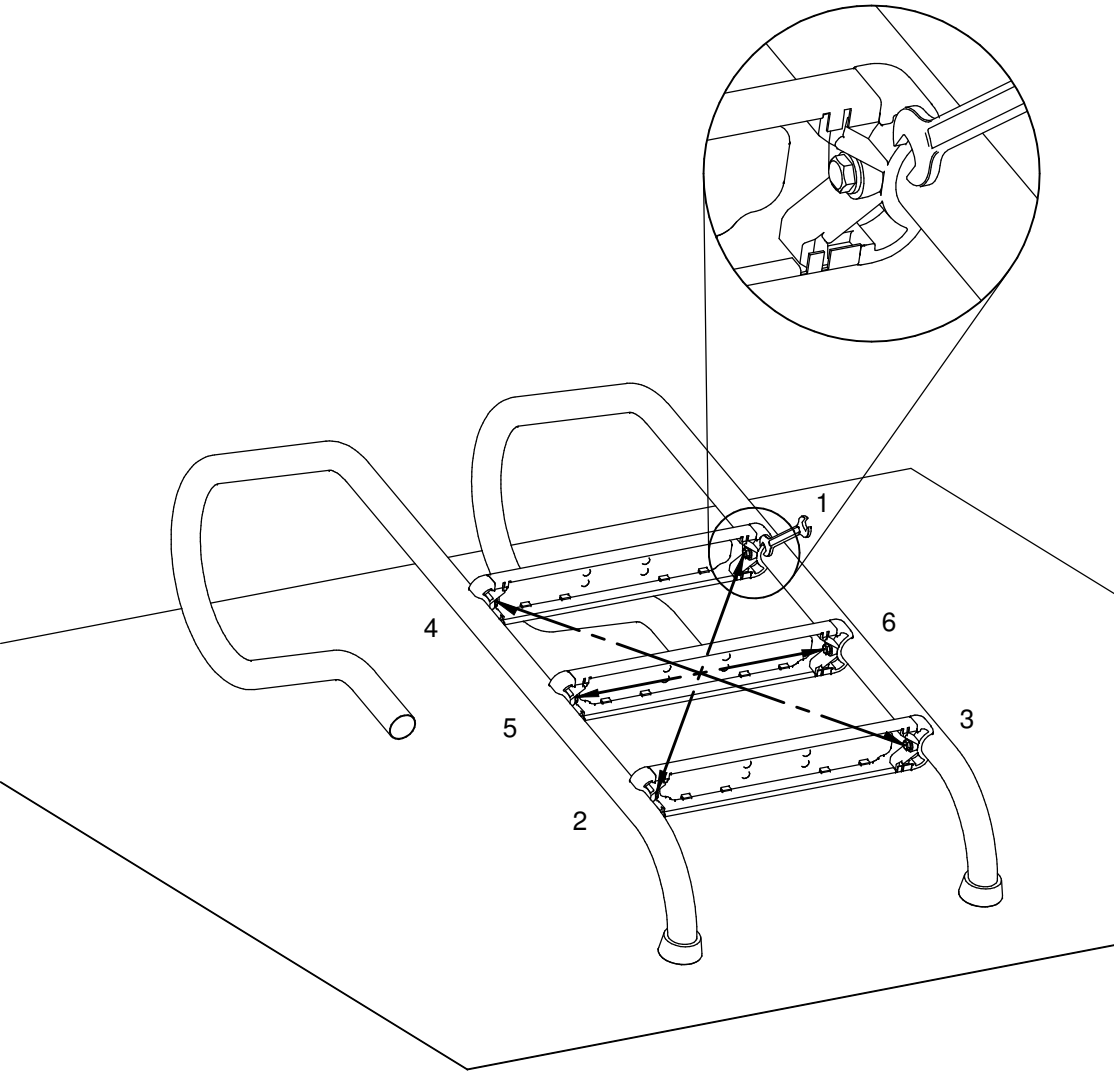

6

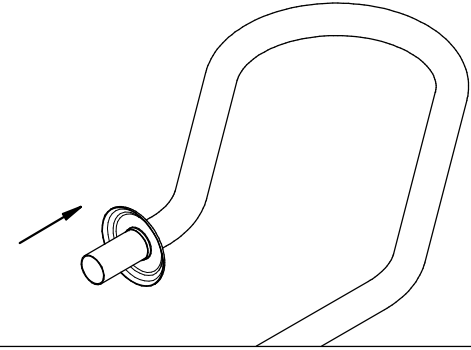

7

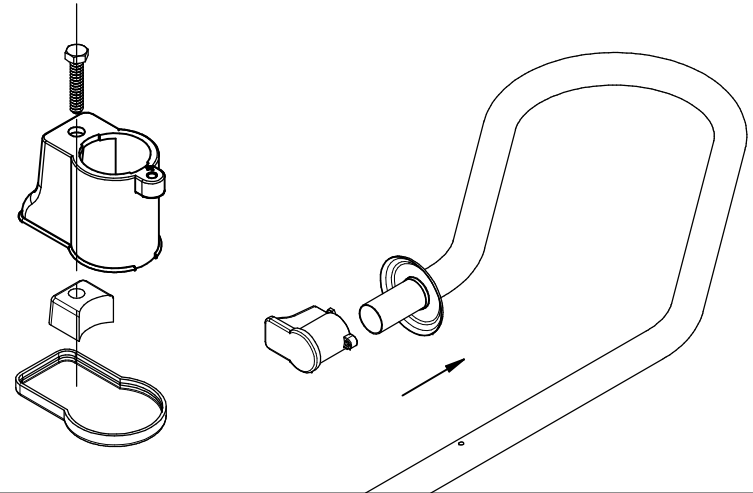

8

