



INSTRUCCIONES DE MONTAJE
ARCO ESPECIAL


ASSEMBLY INSTRUCTIONS
ESPECIAL OVERFLOW




INSTRUCTIONS DE MONTAGE
ARC SPECIALE

MONTAGEANLEITUNGEN
SPEZIALBOGEN


09940717



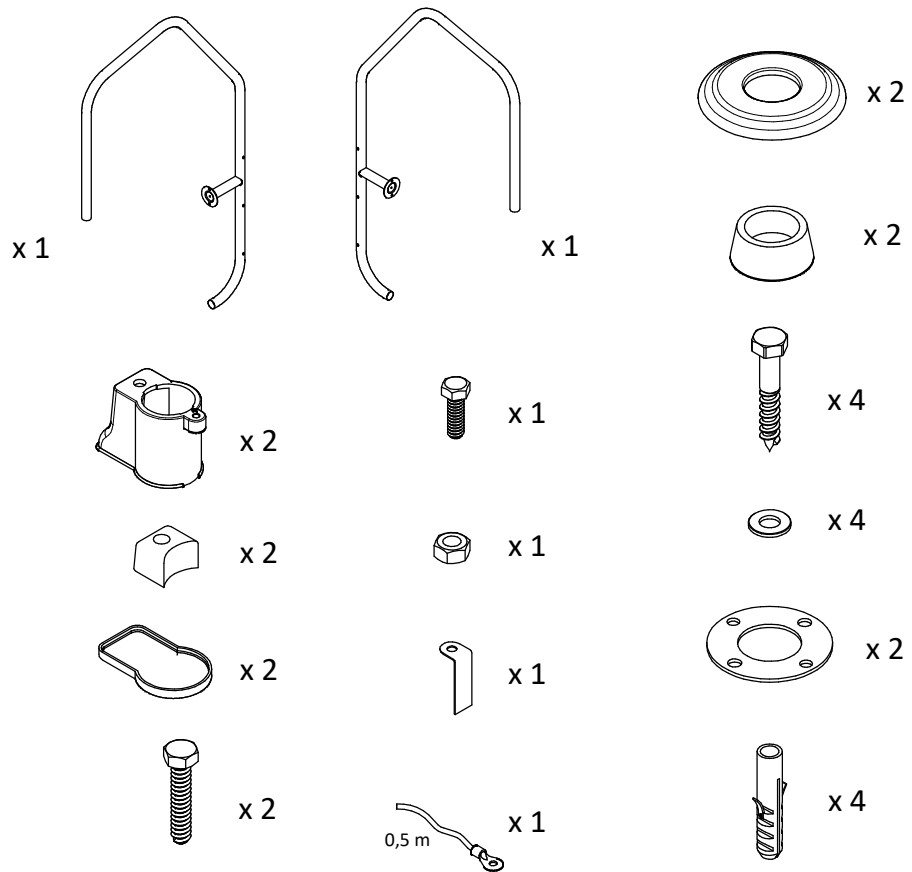


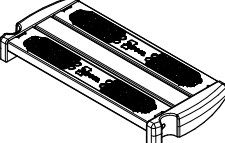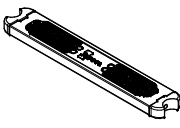	x 1	x 1	x 1
	x 2	x 3	x 4
	x 6	x 8	x 10


14

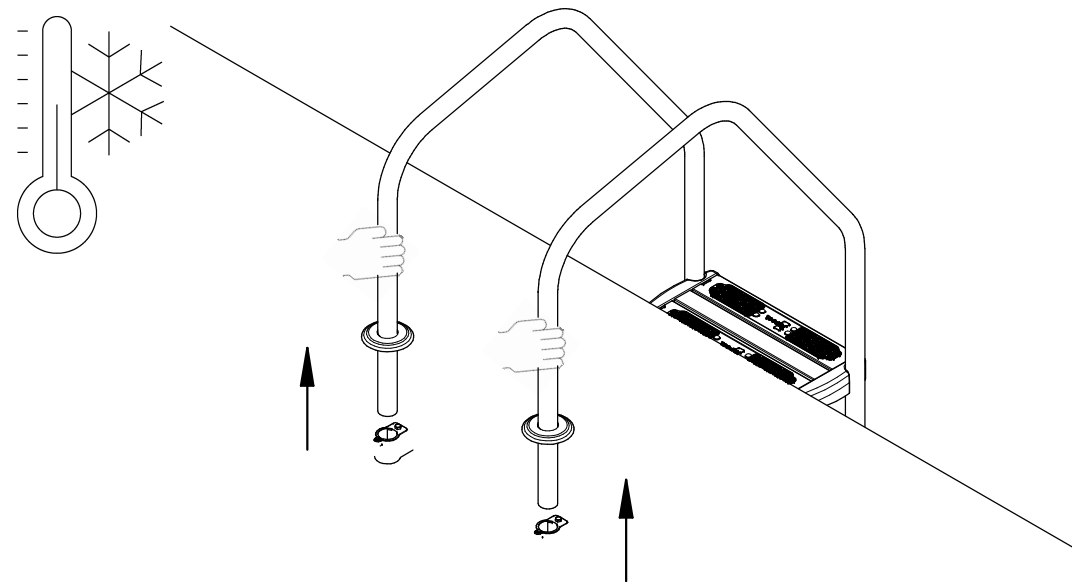


15

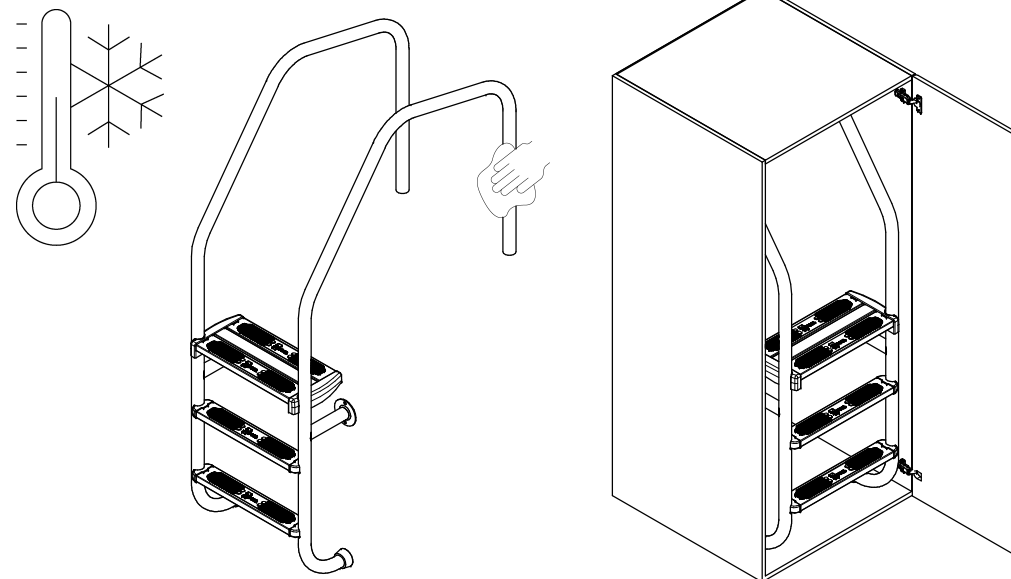


2

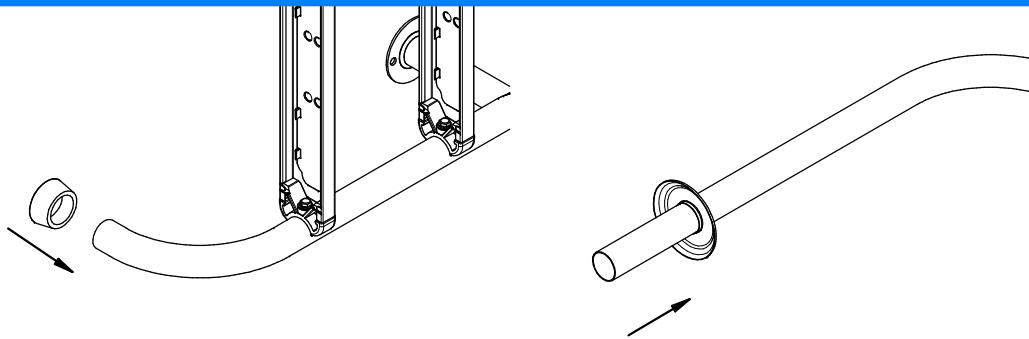


3

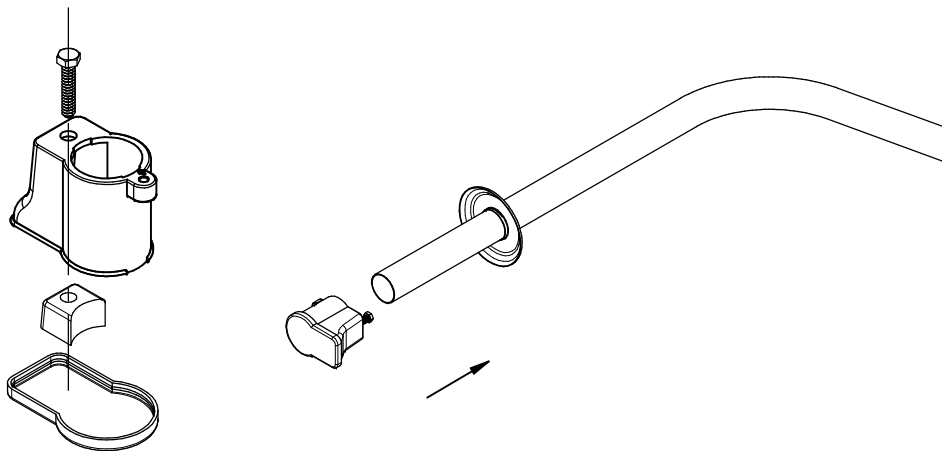



4

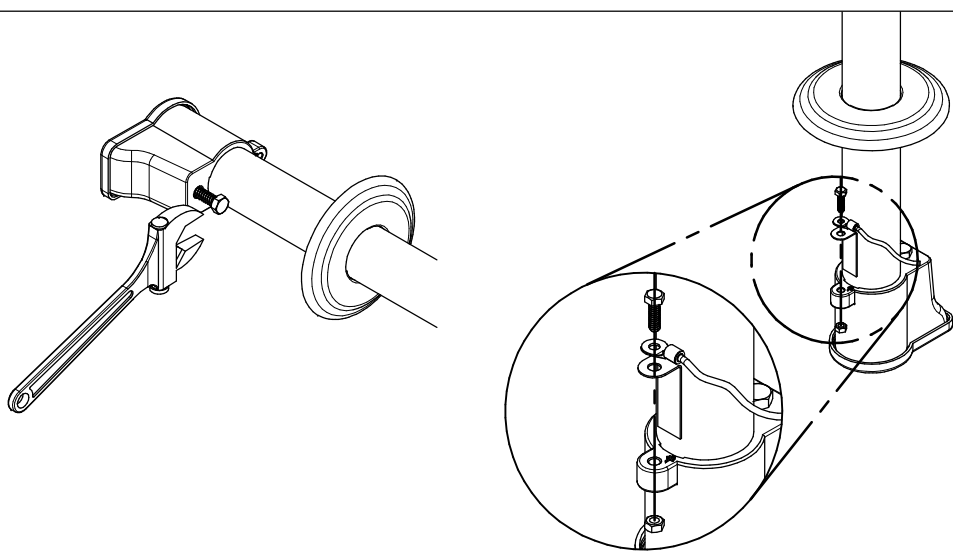




11

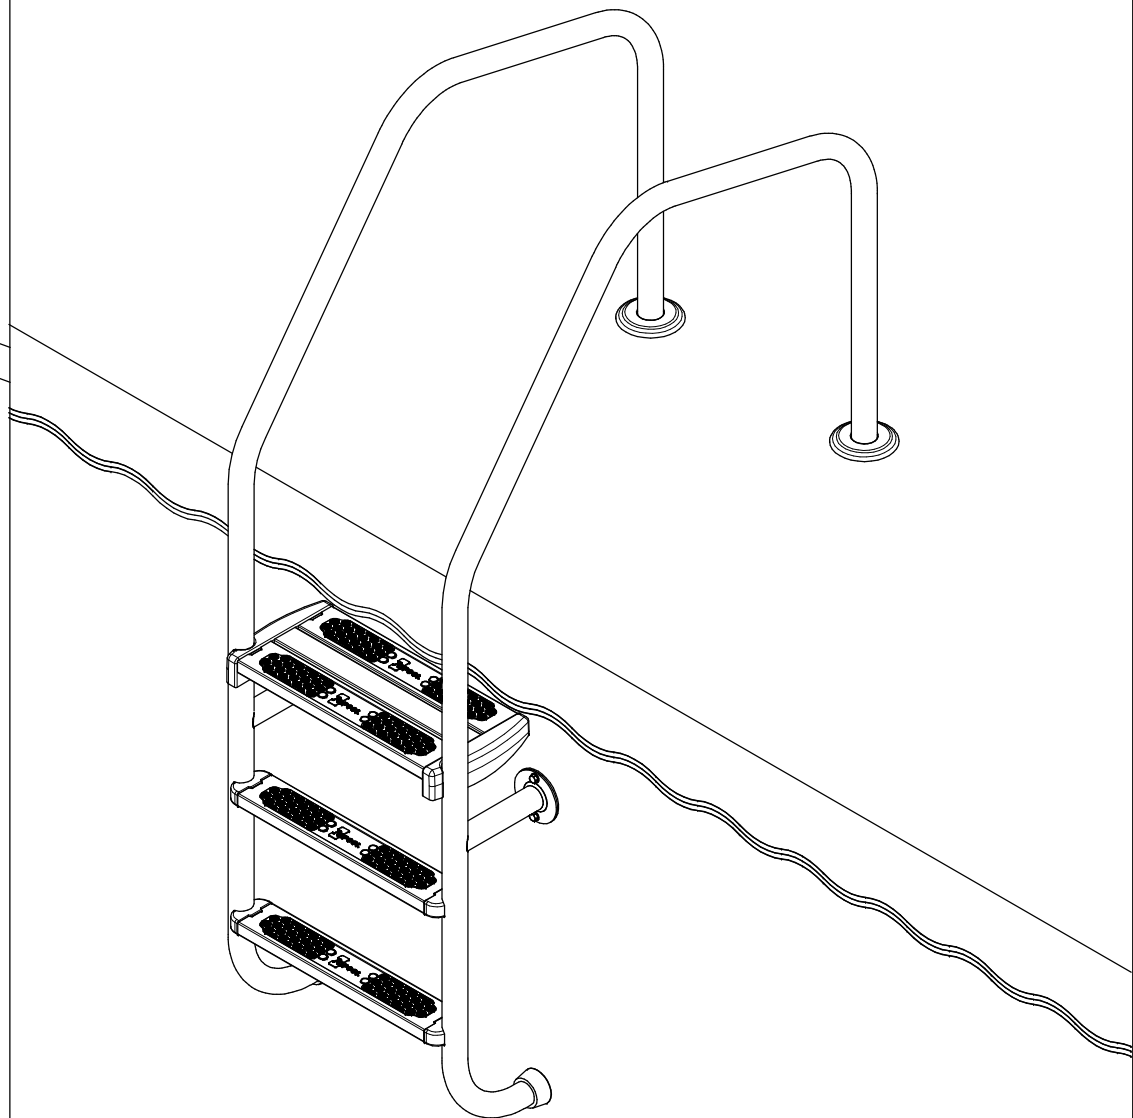



12

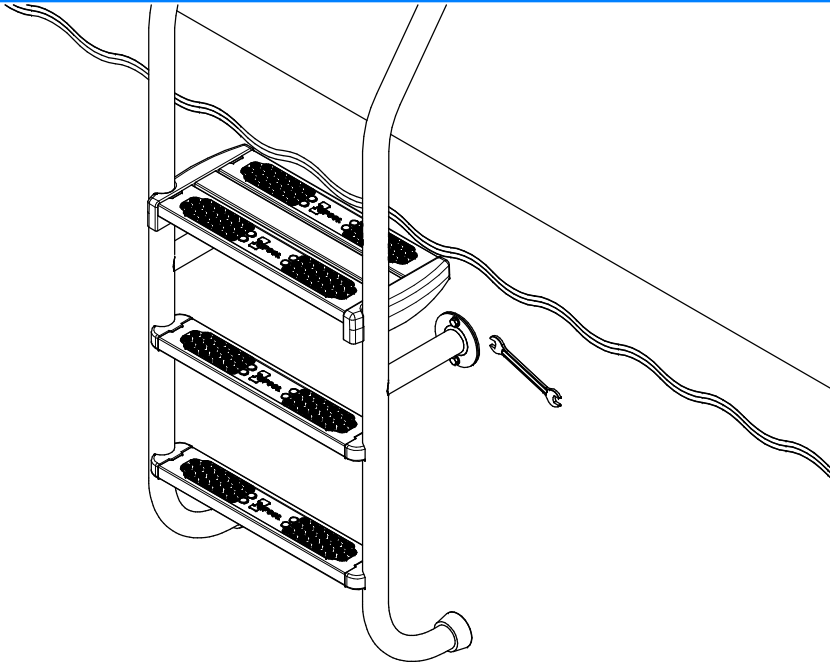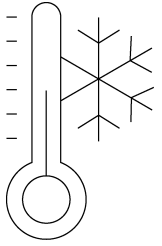


1

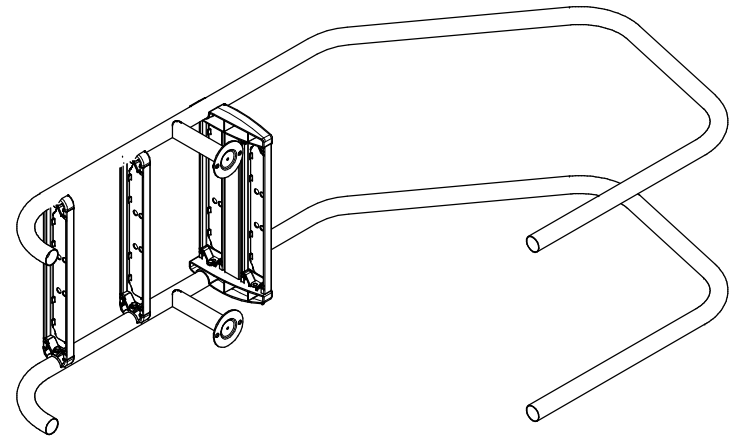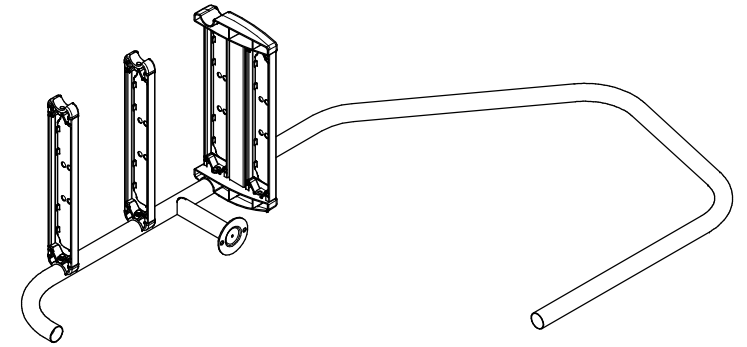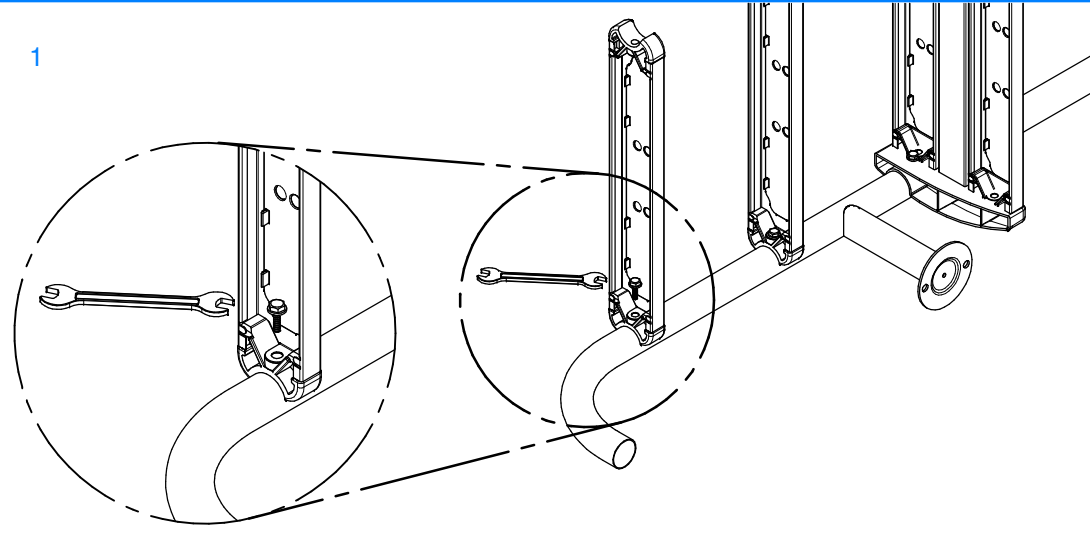


13

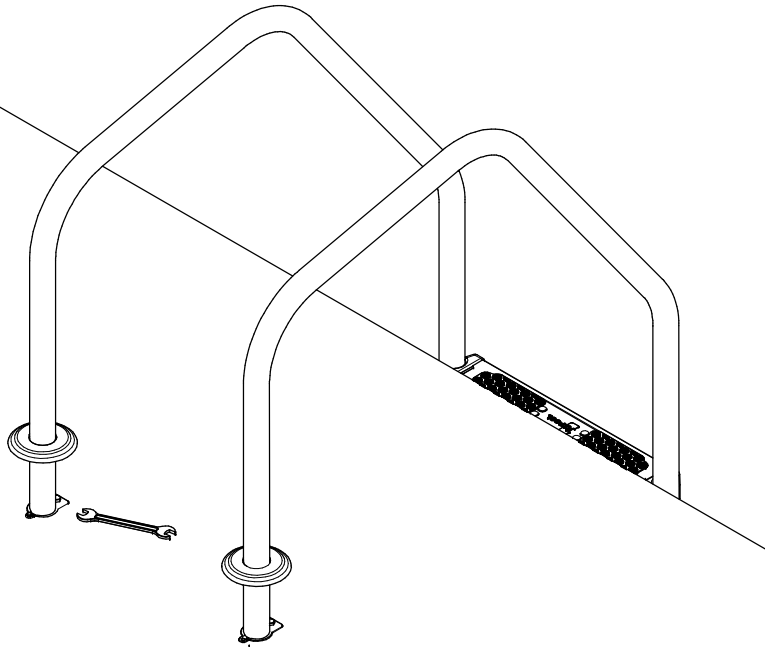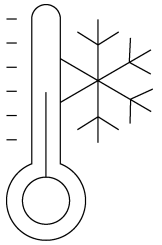


6

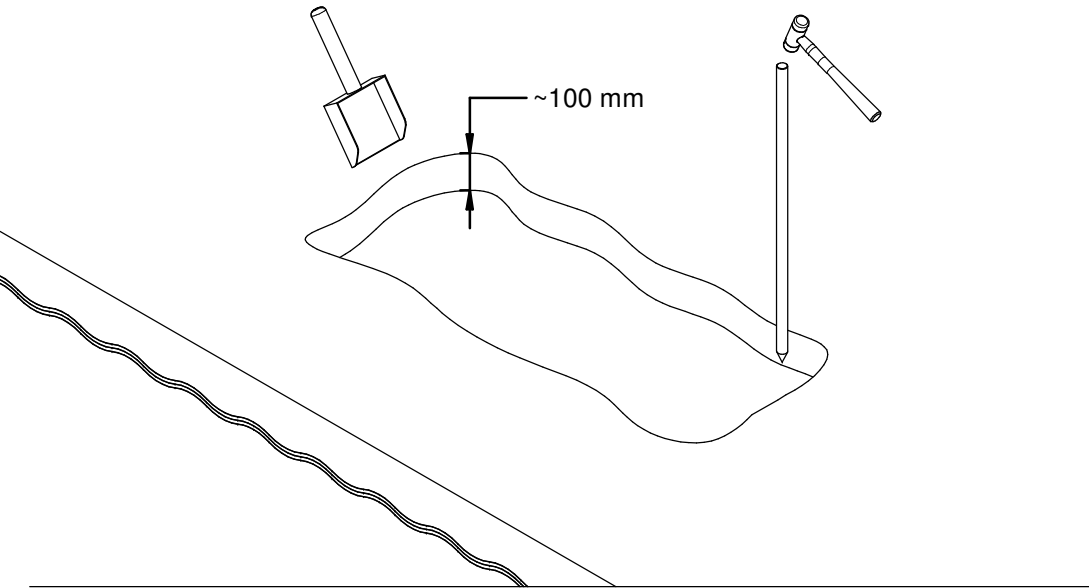

7

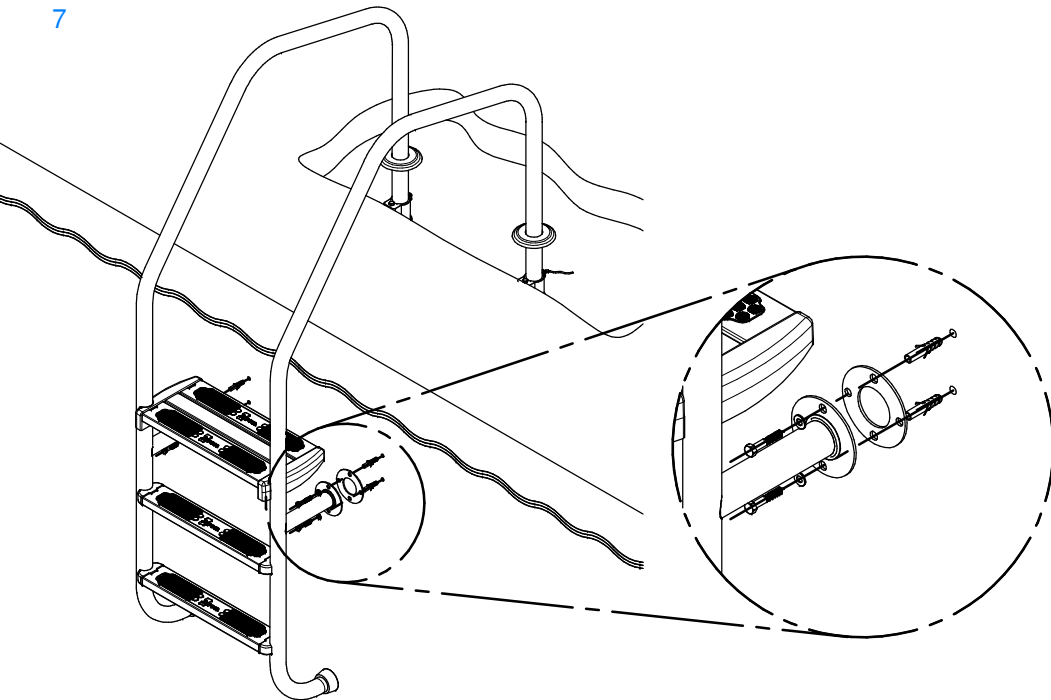

8

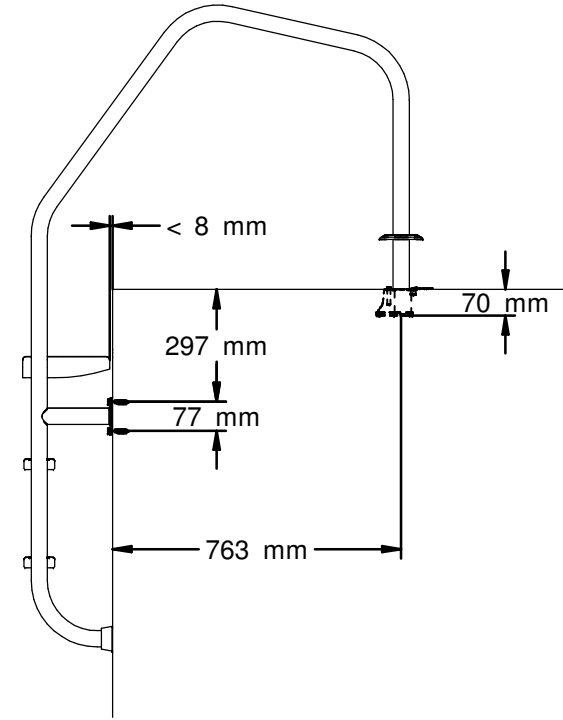

9

